 


Smart Pet Treats Feeder(Wifi)

Please read the manual carefully before using the feeder

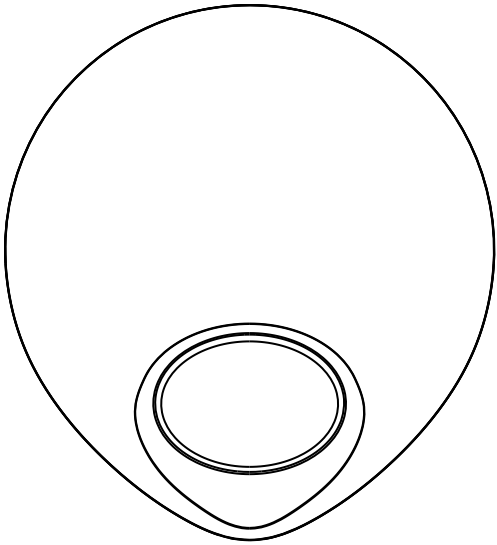

Reminder

Every time the food bowl install to the feeder, please press manual feeding once to rotate the food bowl to the initial position.

Contents


Cautions	1
Product Diagram	1
Instructions	2
Screen Details	3
Button Function	4
Setting Steps	4
Manual Feeding	5
Battery Instructions	5
Packing List	5

Cautions


- The feeder uses DC5V power adapter.
- Sensor Touch Induction button design, Do not press the buttons too hard.
- Support three pcs No.1 batteries to power. Can not use rechargeable batteries.
- Food bowl can be removed for cleaning. Please do not use corrosive detergent to clean it. After cleaning, please wipe it dry and put it back.
- Please note that the electronic components in the base of feeder are not to be washed by soaking water. It is recommended to use a wet cloth to wipe.
- When there are children nearby, please keep close supervision when using the feeder.
- Do not operate the appliance upside down when there is food in it.
- Do not put the feeder in the sun or high temperature environment for a long time.
- If equipment can not work or is damaged, please do not disassemble and repair it privately, Please contact us for more details.
- Before closing the cover, please install the food tray and check for foreign objects. If have please clean them before closing.
- Do not put food over the surface of food bowl.
- Please check the battery level or replace with a new battery before long-time travel.
- Please check whether there is water before connecting to the power source to avoid danger.

Product Diagram

Top View

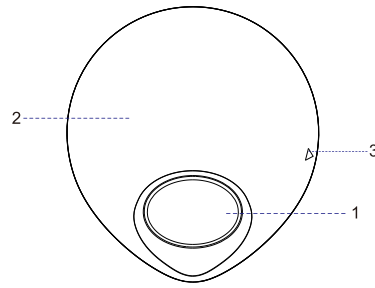


Bottom View

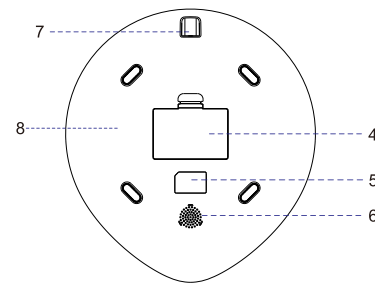


- Food Bowl
- The Cover of Feeder
- Mark(open or close the cover)
- Battery Compartment
- Product Label
- Speaker
- 5VDC Power Interface
- The Bottom of Feeder

Instructions

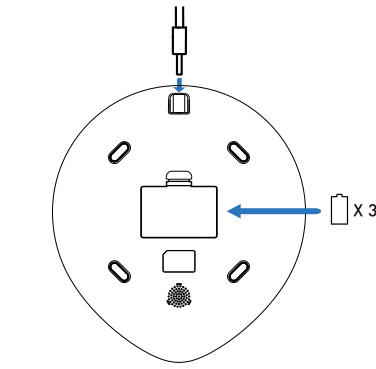


- Connect the DC5V power cord to feeder, and connect the adapter to the socket power source.
- The battery compartment can hold 3 pcs No.1 batteries for going out or power failure. (Note: the product does not contain batteries)
- The blue indicator light is on, indicating that the device is switch on.

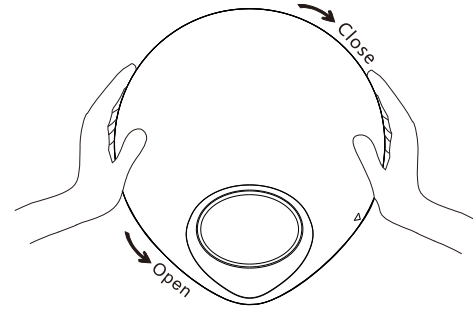

Open : Close :

- Hold both sides of the cover and turn right, when the mark on feeder cover meet the mark on feeder bottom means open the cover.
- Hold both sides of the cover and turn left, when the mark on feeder cover meet the mark on feeder bottom means close the cover.

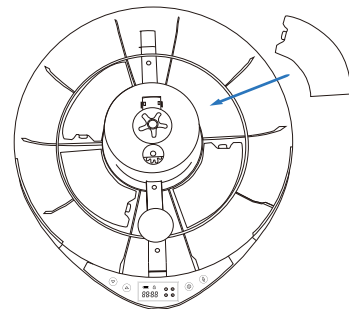

- After opening the cover, take out the food bowl, put it in the ice box (please put the refrigerator before using the ice box), then install the food bowl back, and set feeding plan.

1

2

Indicator Light Description

- Fast flashing: flashing twice in 1 second, WiFi configuration mode
- Blue Light: Slow flashing: flashing once every 3 seconds, hotspot distribution network mode
- Steady on: The network connection is successful
- Mode switching: long on for 7 seconds
- Red Light: Flashing: abnormal detection of limit switch
- Steady light: battery powered
- Key lock/unlock: flash twice
- Mode switching: long on for 7 seconds

Button Function

- Record Button: Press and hold the "record button" for 5s to start recording when sounds "di". Press the "record button" again with sounds "didi" after the recording is completed. Short press to play the recording. the feeder support 10s recording. If you are not satisfied with the current recording can repeat this step to overwrite the previous recording.
- Feed Button: Feeding/locking/unlocking button: short press for 1 portions, recording will be played at the same time, long press for 10 seconds, the red indicator light flashes twice means feeder is locked, long press for 10 seconds again, the red indicator light flashes twice quickly then feeder is unlock. In the locked state, you can press and hold the "RESET Button" to restore the factory settings. In the locked state, you record and feed buttons can not use.
- Reset Button: Network Distribution Mode Switch/Reset button: The blue indicator light flashes quickly by default (WiFi quick connection add mode), press and hold for 7 seconds, it will have sounds "di didi", and the red/blue indicator light will be on for 6 seconds and switch to slow flashes (AP hotspot addition mode), press and hold for 7 seconds in the network configuration state, it will have sounds "di didi, and the red/blue indicator will be on for 6 seconds to reset to factory settings.


App Download QR code




APP

3

Operation Steps

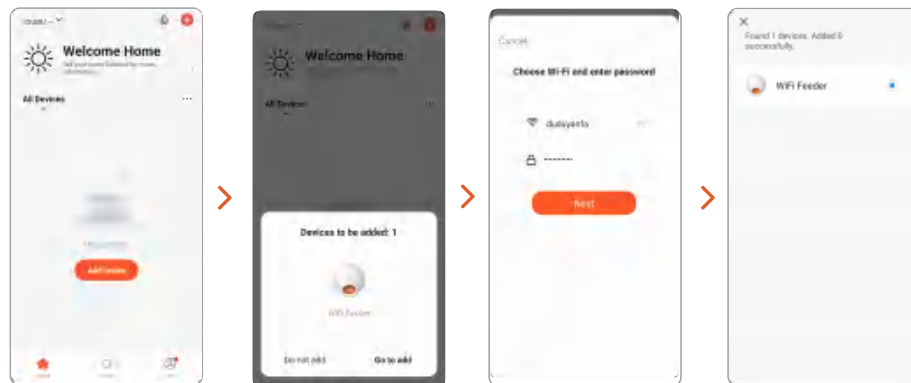


- Download "TuyaSmart" App, Register an account and sign in
- Enter interface, wait for automatic found wifi type pet feeder, Then Click "go to add".
- Enter WiFi password (name without Chinese, password without special symbols)
- Waiting to connect to the network

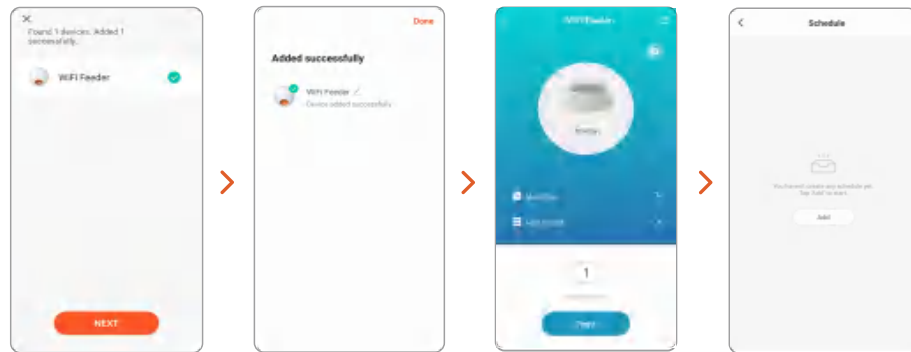

- connection is complete, then next step
- Added successfully (give a name to the device)
- Enter main interface, you can choose manual feeding or set feeding plan according to your needs
- Click "feeding plan" on the main interface to set timing feeding

4

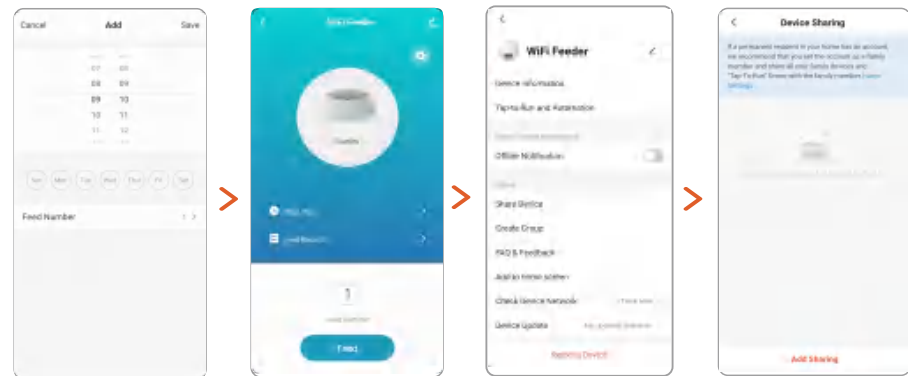

- Can set the time and portions according to the pet's diet, can set everyday or chose the day (Monday to Sunday), then click save
- Share Device Step: Enter main interface to click setting Tap the icon in the upper right corner
- Enter the settings menu option, click "Share Device".
- Add sharing and link accounts (you can become family members only after linking)

Battery Instructions

- Support three pcs No.1 batteries to power.
- Refer to the positive and negative pole marks in the battery compartment when put the battery in the feeder.
- When the battery power is low, the feeder needs to be cut off before replacing the new battery.
- The battery must be removed from the feeder before feeder is discarded.
- The feeder must be powered off when the battery is removed.
- Please put used batteries in special storage points in accordance with relevant regulations to avoid environmental pollution.
- If the battery is not used for a long time, please remove the battery. In case of leakage, please clean the battery compartment immediately and place a special storage point for the leakage battery.

Notices of Network Distribution

- The mobile phone cannot automatically discover the device: Please check whether the Bluetooth and location of the mobile phone are turned on and permission is allowed.
- Steps to add device manually: Add-Small Appliances-Pet Feeder (WiFi)
- Do not use Chinese for WiFi name and password, no more than 12 digits. Please use a combination of numbers and letters. 5G WiFi signal is not supported. Please use 2.4G WiFi signal.

Packing List

After opening the product package, please confirm whether the machine is in good condition. Please check the list to confirm whether the accessories are complete.
The FeederX1, Power CordX1, Product Manualx1

5