


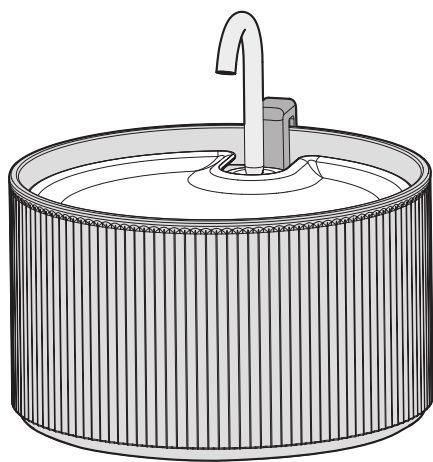

Pet Fountain

Before we start: Care Instructions

In order to provide your pet with fresh and clean water continuously, please remember these three simple tasks:

Refill often.

Keep the water level. The pump is designed to work in water at least one inch deep. If the pump dries, it may malfunction.


Clean your pump and your fountain.

Take your pump and fountain apart to clean with soap and water every 2 to 4 weeks. Be careful not get soap into the filter, as it can not be rinsed out.

Replace your filters.


Replace carbon filter and foam every 2 to 4 weeks. Please replace filter more often if you have more pets.

What you have:

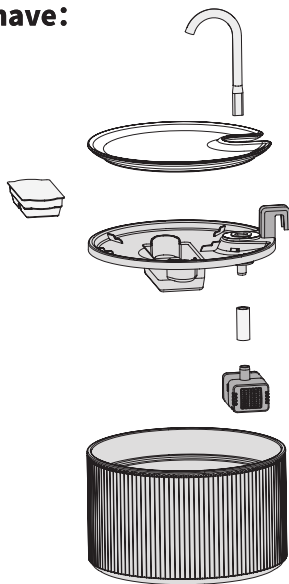


Setup Instructions

1 Put the activated carbon filter in the filter housing .

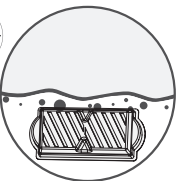


Soak the filter in a clean bowl for 5 minutes.

Notes:
1. The filter must be fully soaked before the fountain is turned on; otherwise, the water may not diffuse through the filter and cause overflow.
2. Do not soak the filter in the fountain tank to avoid dust on the surface.

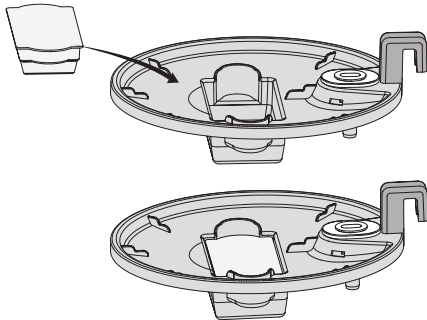


2 Install the pump and put back the cover..

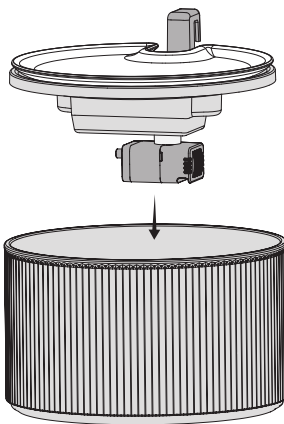

Put back the cover to form a seal.


4 Insert the faucet.

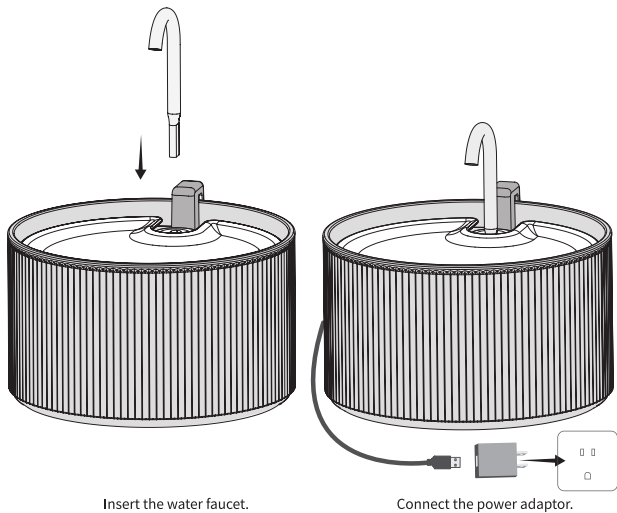

Insert the water faucet.

Connect the power adaptor.

User Instructions

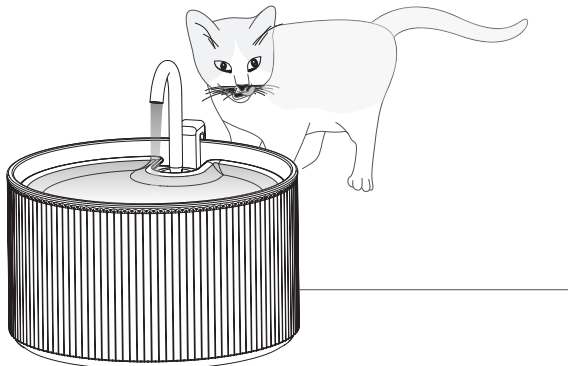


Place the fountain where your pet will use it. Fill the bowl with water, leaving a half inch of space between the water and the rim. Make sure your hands, the cord and the power adaptor are dry, then plug the fountain into an outlet.

Keep healthy and happy flowing

Water Pump Cleaning

In order to ensure that the water pump can continue to operate normally and maintain its service life, the water pump must be cleaned regularly.

1. Remove the Pump Cover.
2. Remove the Impeller Cap.
3. Remove the Impeller.
4. Clean the inside of the water pump and the impeller with the brush.

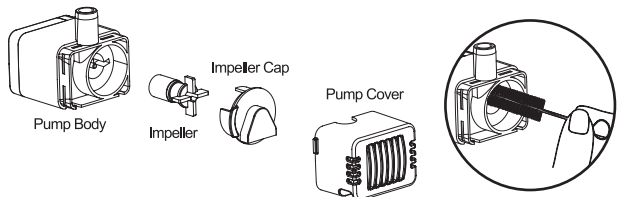

Cautions

1. Be sure to shut down and disconnect the power supply for safety when the equipment is not in use.
2. This product is for indoor use only.
3. The power adapter and wire plug must not be flooded during cleaning.
4. This product is not allowed to run without water .
5. Please disconnect the power supply before maintaining and cleaning the machine.